

INSTALLATION INSTRUCTIONS


MINI WARDROBE SERIES

wardrobes
online



For safety, always secure furniture to the wall to prevent tipping and injury.

1. If your mini wardrobe includes a shelf tower, lie side panels on the floor and insert cam pins into all holes where the locking shelves will sit.

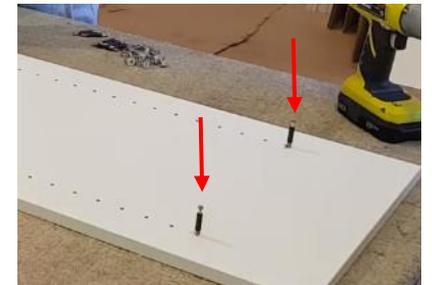

2. In the shelves, insert the Cams with arrow facing outwards.



3. Slot shelves into cam pins on one panel, and screw cams to tighten. Ensure the white edge of the shelf is at the front of the tower, and that the cams are facing the ceiling at the top of the tower, and the cams are facing the floor on the lower half of the tower.

Once the shelf is in place, tighten the cams with screwdriver. Be careful not to overtighten.

Repeat with other side panel by lying the panel on top of the open shelves and slotting the cam pins into the second panel. Screw cams to tighten. Take care not to overtighten cam.



4. Position assembled tower in wardrobe and use econo brackets (supplied) to fix the tower to the back wall.



5. Measure and cut top shelf and rails to fit.

Refer to Top Shelf Installation, and Hanging Rail Installation pages for information about cutting and installation. If you have purchased a top shelf and rail (no tower), you can install your shelf and rails at any height. Standard top shelf heights are 2m and 1.8m from the floor. This gives adequate hanging length. However if you are installing a child's wardrobe, you might like to consider lowering the rail and shelf heights to suit.

Tip: Measure the clothes you intend on storing in the wardrobe before you install rails.



6. Once everything is in place including the top shelf, secure the system to your gibbed walls with the econo brackets supplied. Where possible, fix econo bracket into studs. Use a 5mm drill bit. We recommend using 2 econo brackets per tower.

