

## INSTALLATION INSTRUCTIONS

wardrobes



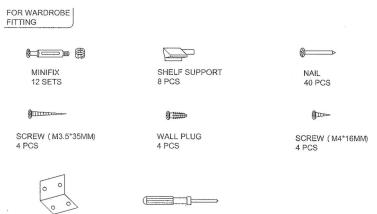


SCREW DRIVER

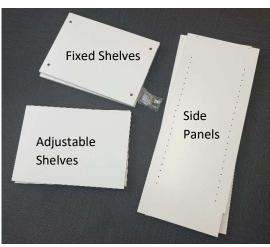



1. Lay out one of the side panels and screw Minifix Cam Pins at both the top and bottom holes one each side panel. Repeat the same on the other panel.

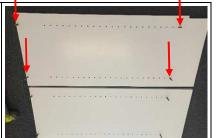

2. If your unit has drawers, install the receiving drawer runners using the Euro Screws pictured here. Wheels should face the front of the tower, and be screwed at both the front and back of the runner. Start with the lowest drawer runner:

Install at the next available hole above the lowest fix shelf (2<sup>nd</sup> hole from bottom). Leave 5 holes blank, then install the next runner (8<sup>th</sup> hole from the bottom), and so on. Repeat the same on the other panel, ensuring the drawer runner positions match.



AIII



3. There are 2 fixed shelves. Insert Minifix Cams into the fixed shelves, arrow facing outwards. If they are a snug fit, gently tap them in place with a rubber mallet.



4. On one of the side panels, slot the top shelf into the first fixed shelf position. Ensure the white edge of the shelf is at the front of the tower, and that the cams are facing the floor.

Once the shelf is in place, tighten the cams with screwdriver. Be careful not to overtighten.

Repeat with the lowest fixed shelf, ensuring white edge is at the front and the cams are facing the floor.



- 5. Lower the second side panel into place where Cam Pins meet with fixed shelf Cams. Screw Cams to tighten.
- 6. Stand tower upright and position the tower in place in your wardrobe and secure to the wall using the L-Brackets (supplied).
  Where possible, fix brackets into studs, or if studs are not available use the Wall Plugs provided. Use a 5mm drill bit.





7. Stand tower upright.
Insert Adjustable Shelves at your desired heights using the Shelf Supports.
If your system has drawers, install your drawers by angling the drawer upwards (as shown) and lower and level the drawer as you slide it in. See Drawer Assembly for more information.

For drawers to operate correctly, make sure the wardrobe tower is on a level surface and square to the back wall. If the floor is not level then floor packers may be required (not included).

