


INSTALLATION INSTRUCTIONS

PINNACLE WARDROBE / CUPBOARD


wardrobes
online

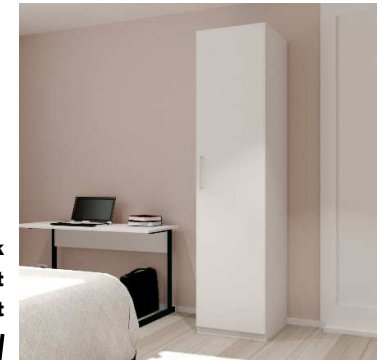

1. Lay out side panels and screw **Cam Pins** at fixed shelf positions and the back-cleat support:
Top fixed Shelf – holes at top end of wardrobe
Floor base – holes at bottom end of the wardrobe
Fixed internal shelf - can be positioned where you like, our example shows the shelf positioned 8 holes down from the top of the wardrobe leaving enough room for hanging underneath.
Back Cleat Support – 2 holes positioned at the rear of each panel toward to the top.

Repeat the same Cam Pins on the second panel, ensuring the shelf positions match.

2. There are 2 fixed shelves, 1x back- cleat and 1 floor base section.
Insert the **Cam Locks** into the fixed shelves, and the back- cleat, arrow facing outwards.
If they are a tight fit, gently tap them in place with a hammer.

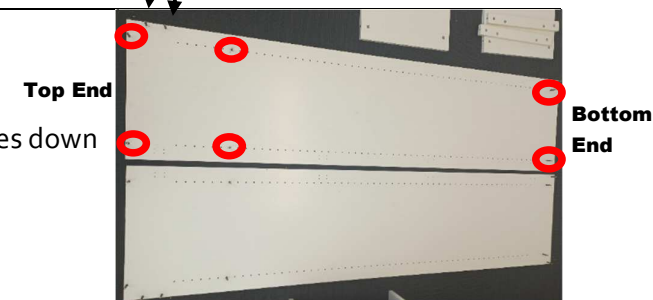


3. On one of the side panels, slot the top shelf into the first fixed shelf position. Ensure the white edge of the shelf is at the front of the wardrobe, and that the cams are facing the ceiling at the top of the wardrobe. Repeat with the back-cleat ensuring cams are facing the back of the wardrobe so they won't be visible. Once the shelf and back-cleat is in place, tighten the **Cam Locks** with the screwdriver. Be careful not to overtighten.

Repeat with the internal fixed shelf, but ensure the cams are facing the floor.



4. Assemble base of wardrobe together using **Cam Pins** and **Cam Locks** as shown.

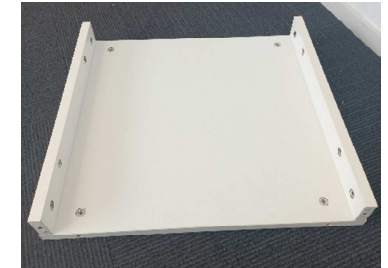

5. Slot the base section onto the lowest cam pins as pictured. Tighten the **Cam Locks** with screwdriver. Be careful a not to over tighten.



6. Lower the second side panel into place where **Cam Pins** meet with **Cam Locks**. Screw **Cam Locks** to tighten.




7. As the wardrobe is currently on its side, turn the wardrobe onto its front.
Line up backing board with the white side facing inside wardrobe.
Use tacks supplied in each corner and down the sides of the wardrobe panels to secure in place.



8. Turn wardrobe back onto its side for door installation.
Screw hinges on door panel first.
Then screw door hinges onto the wardrobe as pictured.
You can choose to attach door to the left or right side of the wardrobe.
Take into consideration where the wardrobe will go and which side you wish to open the door from.



9. Stand your wardrobe upright, carefully position the wardrobe in position in your room.
10. Using screws provided, attach door handle as pictured.

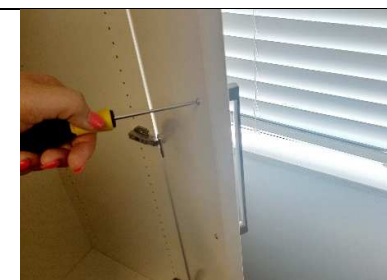

11. Insert any adjustable shelves (if purchased) at your desired heights using the shelf supports.

If your wardrobe has been supplied with a hanging rail, screw the Rail End Brackets onto opposing sides of the wardrobe 50mm down from the shelf and 250mm from the back of the wardrobe using the screws provided.
Lower rail into brackets.

Safety: Secure wardrobe to your wall using the white brackets provided

