

INSTALLATION INSTRUCTIONS


PULL OUT SWIVEL MIRROR

wardrobes
online

1. Decide which height to install the mirror.
We recommend installing at a height of approx. 300mm down from the top shelf for an average height person.
(Taller people may prefer the mirror to be installed at a higher point).

The mirror must be installed on a wardrobe panel or wall that is at least 350mm deep to ensure there is sufficient room for the mirror to be stored away when not in use.

2. Using a pencil and a level, mark 2 screw positions for the top bracket following these measurements (as pictured).
1st Screw 127mm from the front edge of wardrobe.
2nd Screw 305mm from the front edge of wardrobe.
Drill a shallow hole (no deeper than 5mm) at each mark.
Be careful not to drill too deep.

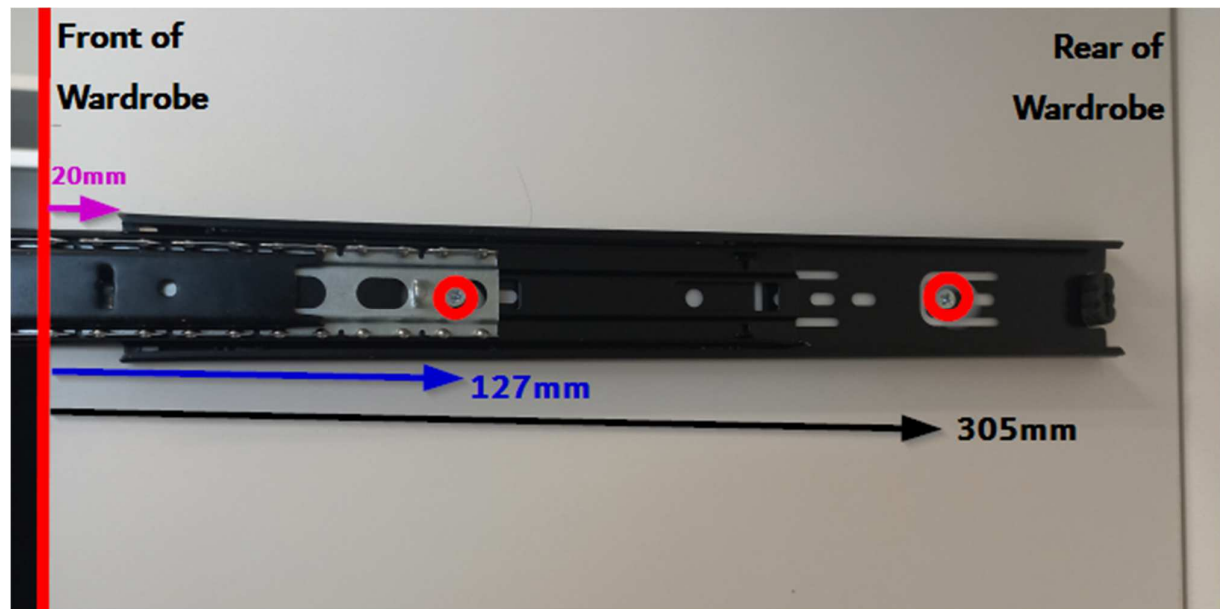

3. Have someone hold the extended mirror so the brackets are exposed for you to fix in place. Use a level to ensure the mirror is installed straight.

Tip: You can remove the mirror from the receiving bracket by pushing the lever on the back of runner as shown and gently pulling the mirror out. If you do this, be sure to measure carefully to ensure the lower bracket is installed at the correct distance from the top bracket.



4. Once the top bracket is installed, simply line up the lower bracket in place and repeat steps 2 and 3 to fix the lower bracket in place.

If you have removed the mirror from the runners, extend the runners out and slide the mirror on to the runners.

Push the mirror the full way in for the runners to engage.

Remove protective clear film.

Enjoy!

