


INSTALLATION INSTRUCTIONS

METRO SLIDING DOORS



Step 1 - Position the top door track flush with the front of the wardrobe and secure using the screws provided.

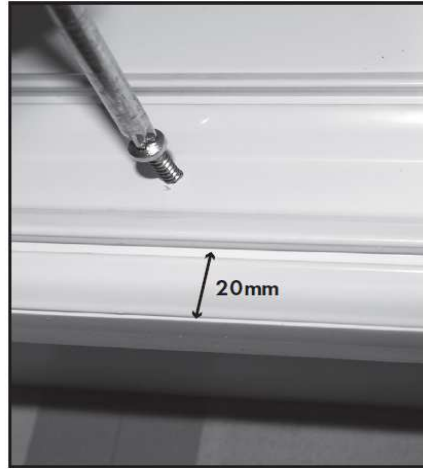

Step 2 - Position the bottom track ensuring it is placed 20mm in from the front of the wardrobe before securing.




Step 3 - Slip top of door into rear channel then set bottom onto the rear floor track. Repeat for second door using front channel and track.



Step 4 - Lift the door and position its bottom wheels into their corresponding guide on the wardrobe floor.



Step 5 - Adjust the ride height of each door with a phillips screwdriver (clockwise to increase height).

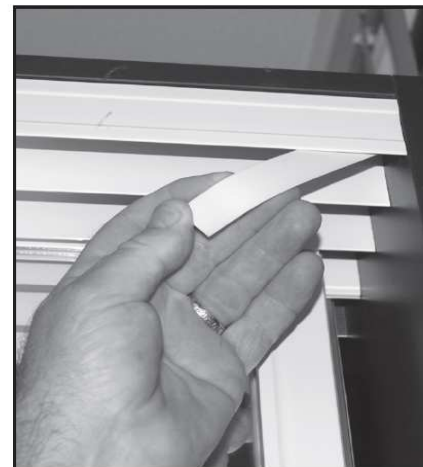

Step 6 - To control movement, peel adhesive & place the brake into each track where you want the wheels on top of the doors to remain stationary.

Installing Doors and Runners to your wardrobe is simple with this easy 6-step install guide!

Note: Door hardware is supplied in the Track Pack.