

# INSTALLATION INSTRUCTIONS

## ULTRA SLIDING DOORS



Installing Doors  
and Runners to  
your wardrobe  
is simple with  
this easy  
7-step install  
guide!

**Note: Door  
hardware is  
supplied in the  
Track Pack.**




1

Align the top track flush with the front of your door jamb. Screw the top channel to header, ceiling or door jamb with the screws provided.



2

Position the bottom track ensuring it is placed 10mm in from the front of the wardrobe before securing. If a packer has been provided, this needs to be screwed/glued onto the hard surface under the bottom track first.

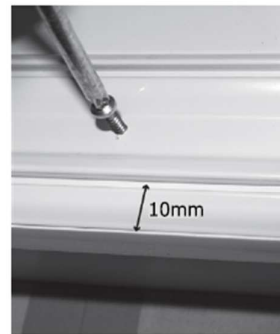

10mm



3

Screw bottom track to the floor or packer with the screws provided. Again, make sure it's 10mm in from the front of your door jamb.



4

Lift the top of the door into the rear top channel, then set bottom wheels into the rear floor track. Repeat for the second door using the front channel and track



5

Use the 4mm allen key (provided) to adjust wheels to raise or lower the doors so they line up with side jambs. Clockwise adjusts the door height up, anticlockwise to adjust down.



6

Starting at one end, slowly peel backing off and press strip position about 1 inch inside the door frame as shown. Gently pinch the buffer strip around the outside of the door frame, continue along pressing the buffer strip in place as you work towards the end. Repeat the same at the other end. Trim excess if required.



7

To help control movement, we have included a series of brake pads in the track pack. Peel the adhesive & place the brake into the tracks where you wish the doors to remain stationary.