

METRO SLIDING DOORS

INSTALLATION INSTRUCTIONS

wardrobes
online

Note: Door hardware is supplied in track pack.

1




Fit the top track flush with the front of the wardrobe jamb and fix with the provided screws (5 screws for Double Top Track, 6 screws for Triple). Position screws 1-2 inches in from each end and space the rest evenly


2



Position the bottom track ensuring it is placed 20mm in from the front of the wardrobe jamb before securing the remaining screws in the same positions as on the top track. If a packer has been provided, this needs to be screwed/glued onto the hard surface under the bottom track first.

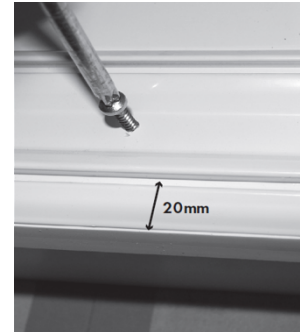

3

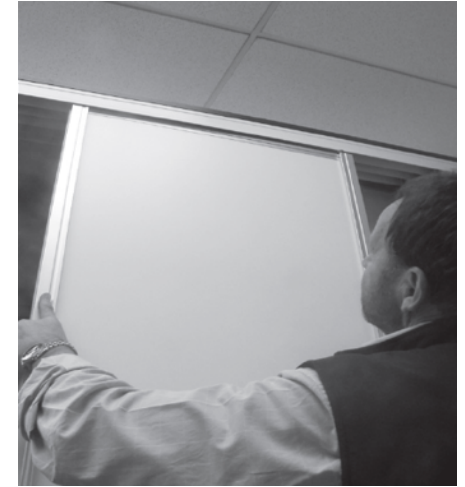

Slip top of door into rear channel then set bottom onto the rear floor track. Repeat for second door using front channel and track.

4



Lift the door and position its bottom wheels into their corresponding guide on the wardrobe floor.

5



Adjust the ride height of each door with a phillips screwdriver (clockwise to increase height).

6



To help control movement peel adhesive & place the brake into the tracks where you want the doors to remain stationary.