

ULTRA SLIDING DOORS

INSTALLATION INSTRUCTIONS

Note: Door hardware is supplied in track pack.


wardrobes
online

1




Fit the top track flush with the front of the wardrobe jamb and fix with the provided screws (5 screws for Double Top Track, 6 screws for Triple). Position screws 1-2 inches in from each end and space the rest evenly

2

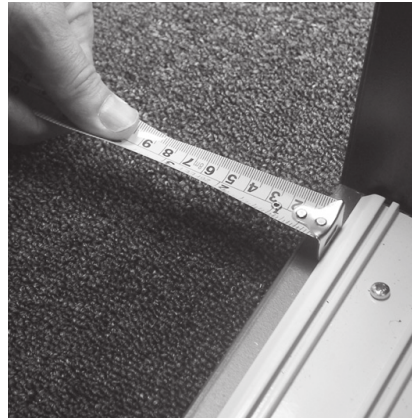

Position the bottom track ensuring it is placed 10mm in from the front of the wardrobe jamb before securing the remaining screws in the same positions as on the top track. If a packer has been provided, this needs to be screwed/glued onto the hard surface under the bottom track first.

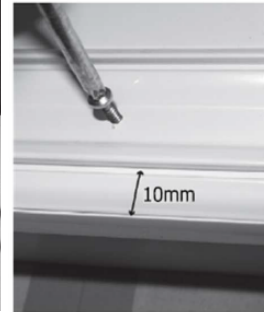

3



Screw bottom track to the floor with the screws provided. Again, make sure it's 10mm in from the front of your door jamb.

4



Slip the top of the door into the rear channel then set bottom onto the rear floor track. Repeat for the second door using front channel and track.

5



Use the 4mm allen key (provided) to adjust wheels to raise or lower the doors so they slide easily and line up with slide jambs. Clockwise adjusts the door height up, anticlockwise to adjust down.

6



Starting at one end, slowly peel backing off and press strip position about 1 inch inside the door frame as shown. Gently pinch the buffer strip around the outside of the door frame, continue along pressing the buffer strip in place as you work towards the end. Repeat the same at the other end. Trim excess if required.

7



To help control movement, we have included a series of brake pads in the track pack. Peel the adhesive & place the brake into the tracks where you wish the doors to remain stationary.